

Porsche
Cayman GT4 Clubsport with CAN Gateway



## Overview

Racelogic have acquired CAN signals for customers to use with VCI (Vehicle CAN Interface) products. This information is available by listening on the relevant CAN bus on the vehicle and interpreting the messages to form easy to use information which is then available for data logging.

## VBox Video HD2 Users

Users of VBox Video HD2 will find this vehicle available to be selected via the VBox Video setup software which can be downloaded from our website. The software is supplied with instant access to the CAN information for a large array of vehicles and is kept automatically up to date as new vehicles and signals are added (Subject to internet connection).

To start using HD2 with your vehicle simply follow the steps below:

- 1. Open VBox Video Setup
- 2. Click the "Settings" menu option
- Select "CAN"
- 4. Select "Vehicle database" under "Source"
- 5. Select "Porsche" and "Cayman GT4 Clubsport with CAN Gateway"
- 6. Tick the signals you wish to use

# Use with other Racelogic Products

Users of other Racelogic products will need to download a file from our website here: <a href="https://vboxmotorsport.co.uk/index.php/en/customer-area/vehicle-can-database">https://vboxmotorsport.co.uk/index.php/en/customer-area/vehicle-can-database</a> Select "Porsche" and "Cayman GT4 Clubsport with CAN Gateway" from the dropdown selection to download the relevant file.

Refer to the user manual of your product for details on how to use this file.



## Wiring Connection

Connection to the Porsche Cayman GT4 MR Clubsport is made via Porsche's own recomended CAN Gateway. A connection into this can be found on the right hand side of the vehicle in the footwell close to the floor between the rear bulkhead and side door intrusion bars. The connector is a 6-pin Deutsch connector with the following pin assignments:

Pin 6 - CAN Low

Pin 5 - Can High

A Deutsch DTM 06-6S Connector will be required to be fitted to bare wires in order to interface with the vehicle.

PLEASE NOTE: This information is provided as a general guide to CAN Bus wire colours only and colours may be subject to change without notice. Racelogic accepts no responsibility for damage or malfunction caused by incorrect wiring of its products to a vehicle. Any connection to a vehicle CAN Bus should be done by a trained automotive technician.

#### CAN bus Connection

The CAN bus must be configured at a baud rate of 500k and with CAN Acknowledgement enabled.

#### Cable - VBox Video HD2

To connect the HD2 system to a vehicle CAN bus system using a bare wire, an <a href="RLCAB015L">RLCAB015L</a> cable must be used.


<u>Click here</u> for a cable drawing including PIN outs for the RLCAB015L.

Note: If the connection needs to be made using a bare wire interface with the CAN High and Low outputs of the vehicle, we strongly recommend contacting a qualified auto-electrician to perform the fitting.

#### Cable - Other Racelogic Products

To connect between your racelogic product and the vehicle a bare wire Cable is available, if this was not supplied with the product please contact us for details.



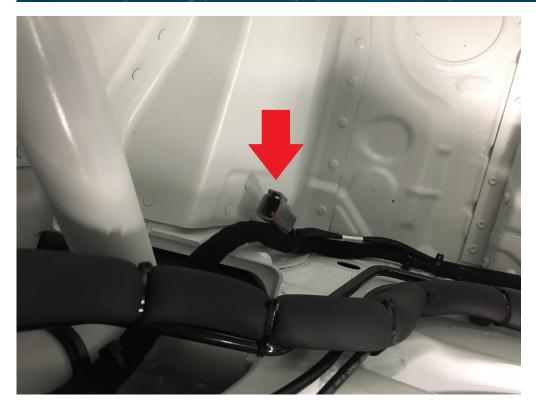









## Available CAN Channels

The following signals are available for selection:

| Signal                              | <b>Default Units</b> |
|-------------------------------------|----------------------|
| Air Temperature                     | °C                   |
| Battery Voltage                     | V                    |
| Brake Position                      |                      |
| Brake Pressure                      | bar                  |
| Coolant Temperature                 | °C                   |
| Engine Speed                        | rpm                  |
| Fuel Level                          | L                    |
| Gear                                |                      |
| Indicated Lateral Acceleration      | g                    |
| Indicated Longitudinal Acceleration | m/s                  |
| Indicated Vehicle Speed             | km/h                 |
| Intake Air Temperature              | °C                   |
| Odometer Reading                    | km                   |
| Oil Pressure                        | bar                  |
| Oil Temperature                     | °C                   |
| Steering Angle                      | 0                    |
| Throttle Position                   | %                    |
| Traction Control Mode               |                      |
| Wheel Speed FL                      | km/h                 |
| Wheel Speed FR                      | km/h                 |
| Wheel Speed RL                      | km/h                 |
| Wheel Speed RR                      | km/h                 |
| Yaw Rate                            | °/s                  |

Note: not all signals listed above will be applicable to all variants of this vehicle and so may not be available for your specific vehicle.

# Support

If any data contained in this document is incorrect or for further support please visit our website here: <a href="http://www.vboxmotorsport.co.uk/support">http://www.vboxmotorsport.co.uk/support</a>